


INSTRUCTIONS

DIY Mosquito Exclusion - Yard Drains

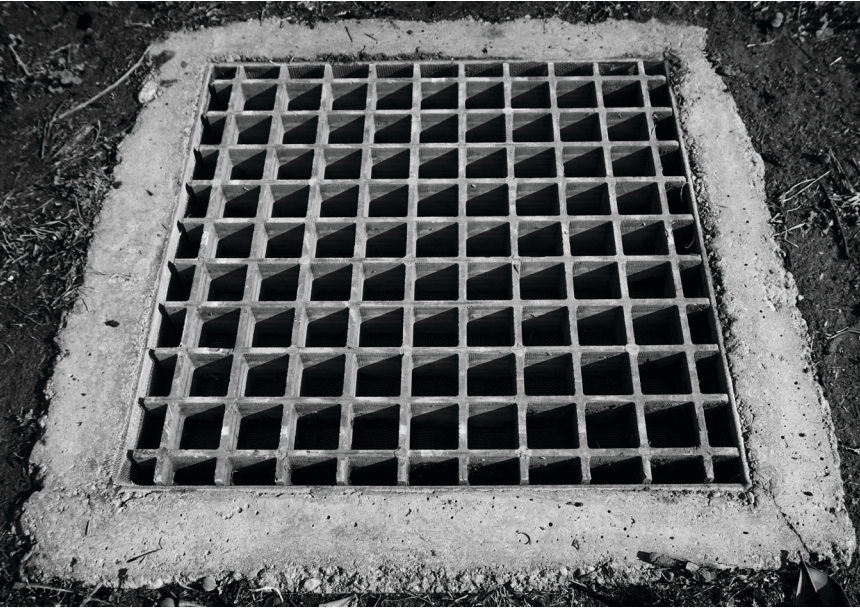

Tools

Heavy Duty Scissors

Tape Measure

16 or 18 Mesh Aluminum
Insect Screen

8-inch zip ties

Marker

Step 1.

Locate all yard drains on the property- look in planters, lawn areas, near buildings, etc.

Step 2.

Remove and measure each drain cap/cover. Clean out any leaf litter or debris inside the drain. Remove any standing water or place Mosquito Dunk (or other Bti product) in the water.

Step 3.

Cut screen several inches larger than the drain cover, in both width and length, so that it extends beyond the edges of the cover.

Step 4.

Use Zip-ties to secure screen to underside the drain cover. Cut excess screen, being sure to leave enough overlap to ensure a complete seal when replaced on the drain.

Step 5.

Check and clean the cover and screen regularly.

Watch video tutorial online at bit.ly/yard-drain-screening



District Headquarters
12545 Florence Ave. Santa Fe Springs, CA 90670
562-944-9656

Sylmar Branch
16320 Foothill Blvd. Sylmar, CA 91342
818-364-9589